

COLOMBAIA


DOVECOT - COLOMBIER - PALOMAR - TAUBENSCHLAG




cod. 2234A

MADE IN ITALY

Istruzioni di montaggio Assembly instructions Montageanleitung Notice d'utilisation Manual de instrucciones

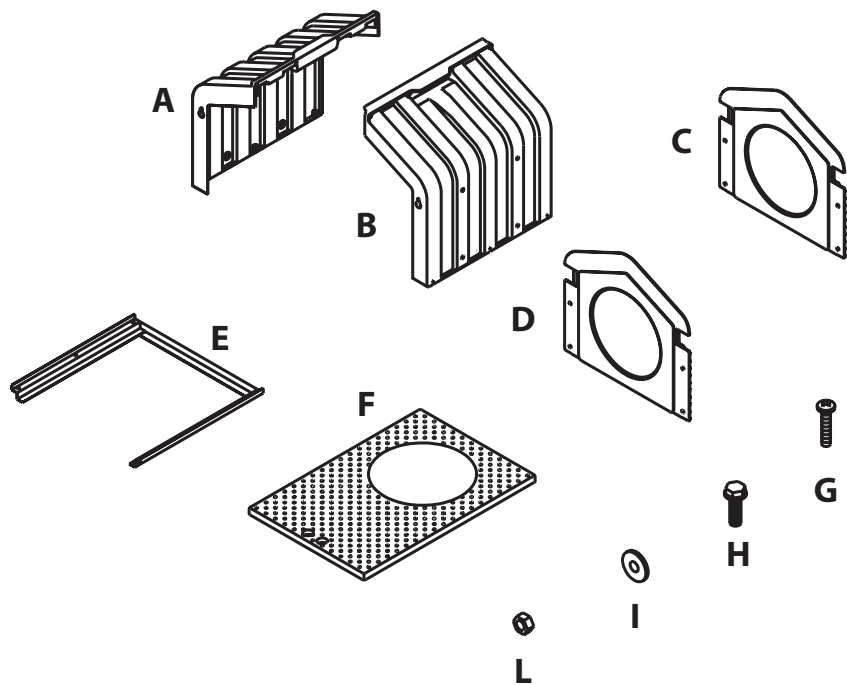

cod.		Pz
5065P	A	1
5066P	B	1
5067P	C	1
5068P	D	1
5069P	E	1
4259P	F	1
3698P	G	10
4027P	H	2
8P	I	2
29P	L	2

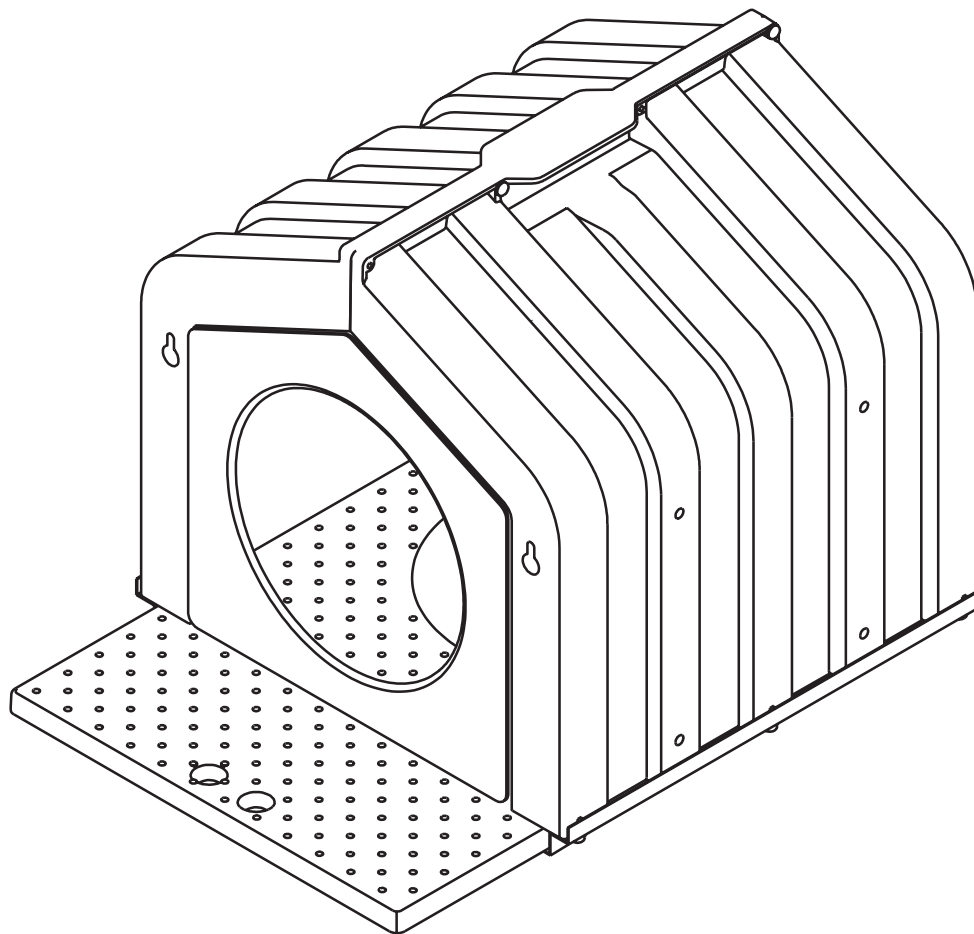

www.novital.it







COLOMBAIA

DOVECOT - COLOMBIER - PALOMAR - TAUBENSCHLAG



MADE IN ITALY

Istruzioni di montaggio Assembly instructions Montageanleitung Notice d'utilisation Manual de instrucciones

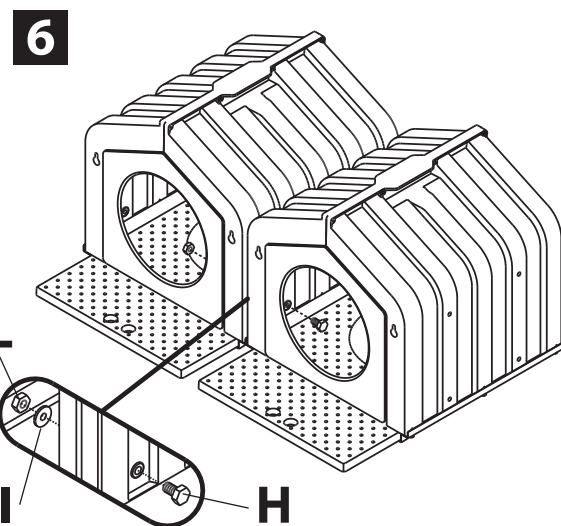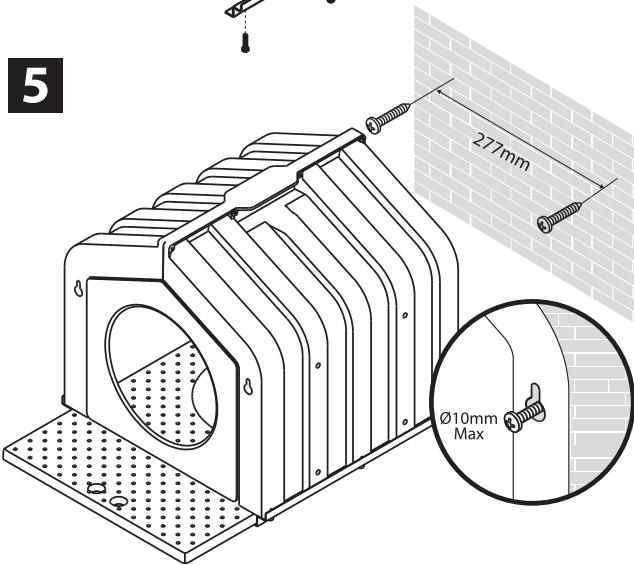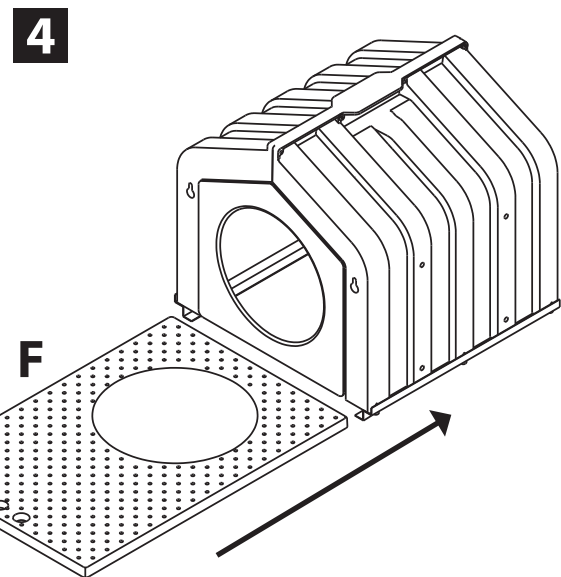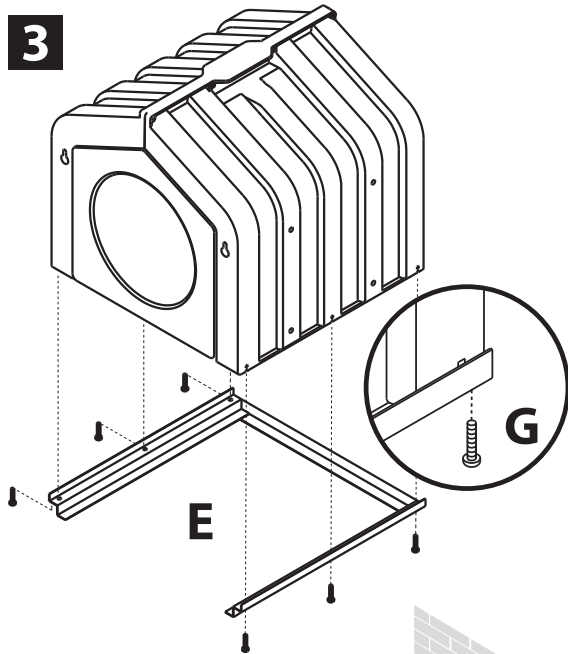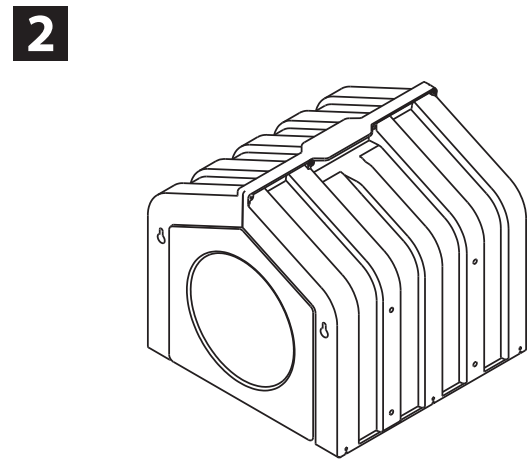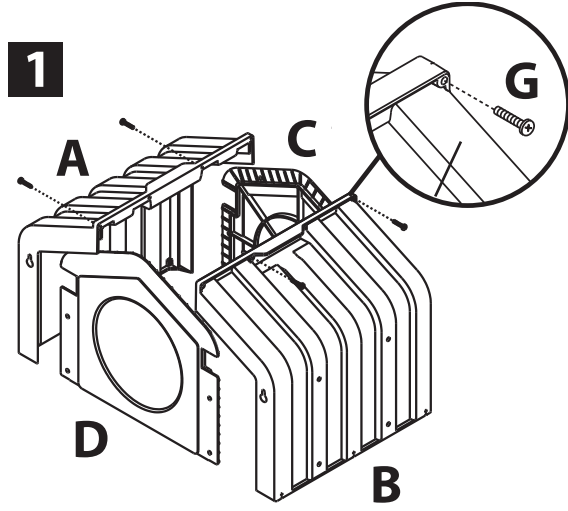

SEGUILE REGOLE DEL TUO COMUNE

www.novital.it